



MITASPOLE
POLE ASSEMBLY and MAINTANENCE
MANUAL

Tarih : 01/10/2007
Rev : 1
Sayfa : 1 / 16


MITASPOLE Inc.

GSM TELECOMMUNICATION POLES
ASSEMBLY and MAINTANENCE MANUAL

Eski Güvercinlik Yolu No : 113 P.K. 9 06560 Gazi/ANKARA
Tel : +90-312 296 2000
Fax : +90-312 296 2999
www.mitaspole.com

Prepared/Revised by
Quality Management Repesantitive
Dr. İlhami PEKTAŞ

Approved by
General Manager
Aziz KARA

	<p style="text-align: center;">MITASPOLE</p> <p style="text-align: center;">POLE ASSEMBLY and MAINTANENCE MANUAL</p>	<p>Tarih : 01/10/2007 Rev : 1 Sayfa : 3 / 16</p>
---	--	--

CONTENT

1. INTRODUCTION
2. PURPOSE
3. SCOPE
4. ASSEMBLY OF THE POLES
 - 4.1. PROCEDURE
 - 4.2. FOUNDATION
 - 4.3. PREPARATION OF ANCHOR BOLTS FOR FOUNDATION
 - 4.4. UNLOADING FROM VEHICLE
 - 4.5. ASSEMBLY OF BOTTOM, MIDDLE AND TOP BODIES
 - 4.6. ASSEMBLY OF BOTTOM BODY
 - 4.7. SLIP-JOINT OF BASE AND SECOND SECTION
 - 4.8. SLIP-JOINTS OF OTHER PARTS
 - 4.9. ASSEMBLY OF ACCESSORIES (PLATFORM, MOBILE RING AND OTHERS)
 - 4.10. PREPARATION OF ANCHOR BOLTS FOR POLE ERECTION
 - 4.11. HOISTING CRANE ROPE CONNECTIONS
 - 4.12. LIFTING OPERATION
 - 4.13. SETTING
 - 4.14. FINAL CONTROLS
5. MAINTENANCE
 - 5.1. COATING REPAIR
 - 5.2. FASTENERS and SAFETY LADDERS CONTROL
 - 5.3. PERPENDICULARITY CONTROL
 - 5.4. EARTING, LIGHTING BAR and AIRCRAFT WARNING SYSTEM CONTROL
6. WARRANTY